

INSTALLATION INSTRUCTIONS

Quick Mount PV™

(510) 652-6686
www.quickmountpv.com

TOOLS NEEDED

Measuring tape, roofer's flat bar, chalk line, stud finder, caulking gun with roofing sealant, drill with 1/4" long bit, drill with 1/2" deep socket.

1. LOCATE RAFTER

Using horizontal and vertical chalk lines to align hole for placement of each Quick Mount

2. DRILL PILOT HOLE


Using drill with 1/4" long bit, drill pilot hole through roof and rafter, taking care to drill square to the roof.



3. LIFT TILE

Lift composition roof tile with roofer's flat bar, just above placement of Quick Mount.

4. SEAL HOLE Using caulking gun with roofing sealant, squeeze a dab of roofing sealant into hole.

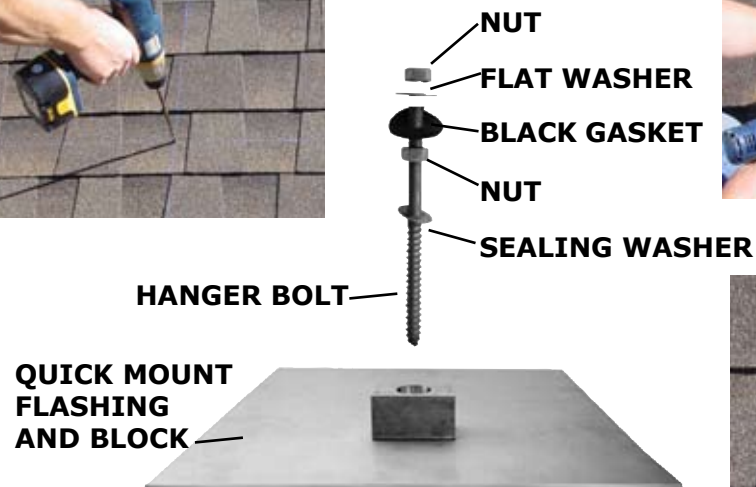

5. SLIDE QUICK MOUNT INTO PLACE

Lift comp tile and slide Quick Mount into place.



6. SET HANGER BOLT, SEALING WASHER & NUT

Using drill with 1/2" deep deep socket, set sealing washer with rubber side down, then nut, and tighten into place.



7. ADD RUBBER GASKET

Push black gasket into place flush with top of Quick Mount block.

8. SECURE RACK INTO PLACE, WITH FLAT WASHER & NUT

Using drill with 1/2" deep socket, set up rack over bolt, with flat washer, then nut, and tighten into place.

